 



Layout and Function

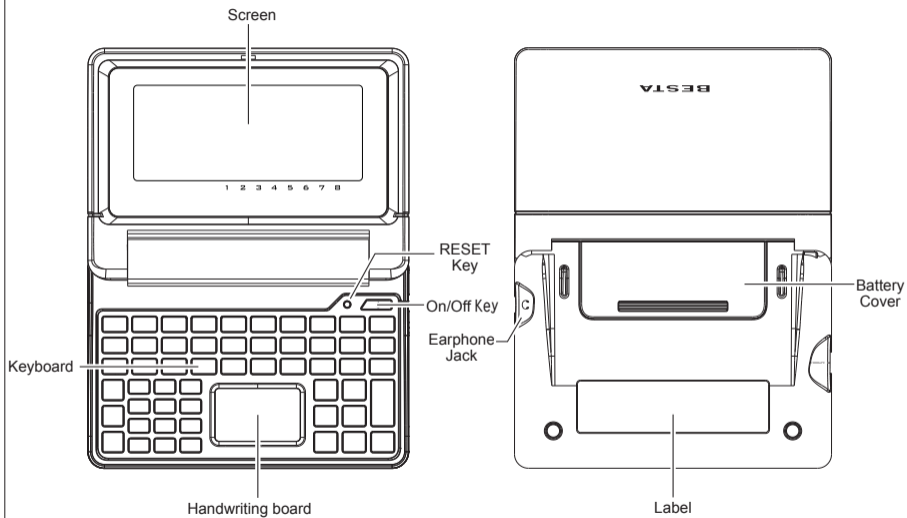

Replacing Battery

Please install the battery before using the device.

 Remove the battery compartment cover, Please insert the positive and negative pole of AAA Alkaline battery into the right place. and then close the battery compartment cover.

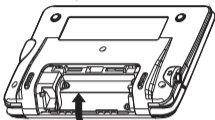

Setting device

After installing the battery, the screen will turn on automatically, then you should set the the local city, date and time of the device.

Setting the local city

 
Input the first letter or preceding letters of the city's English name in setting screen of local city, and press **▲** / **▼** key to choose the right city in the column, and press **ENTER** key to confirm.

Setting the date

Press numeric key in setting screen of date to set year/month/day.

Setting the time

In setting screen of time, press **◀** / **▶** key to switch among hour, minut, am/pm, press **▲** / **▼** key to set, press **ESC** to quit.



Setting the date and time of device

本地城市：吉隆坡
日期：2088/08/08
时间：08:08am

Setting the date

日期/时间格式设定 (完成) 本地城市：吉隆坡
日期：2012/10/01
时间：08:08am
格式设定 (完成)

Setting the time

09 : 01 am

2现在

本地城市：吉隆坡
日期：2012/10/01
时间：09:01am
日期/时间格式设定 (完成)

Notes:

 
- 1 The power is insufficient when just charged, this means the battery is no longer useable. Please get a new one.
- 2 Personal data will be retained even if the device is out of power. Please turn the device off first, and then take out the battery 3 seconds later. Otherwise, data may be displayed incorrectly.

Main Menu

Provides five types of main menus: DICT, STUDY, CALC, TIME, SYS.

- Press **(MENU)** to return to the main menu.
- Press **(▲) / (▼)** key to switch the type of main menu.
- Press the **(ENTER)** key or numeric and letter key to access to the corresponding function items of main menu. You also can press **(▲) / (▼) / (◀) / (▶)** key to choose the items of menu, press **(ENTER)** to access to the applications.

☞ Main menu

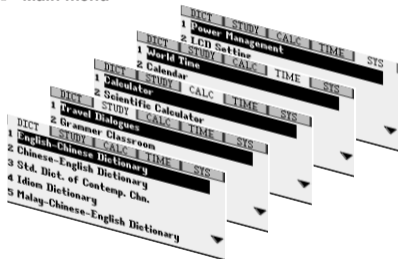

Input Methods

User input words through keyboard and handwriting recognition mode. Device provides following input methods:

☞ Change the input method

- On the edit conditions, press **(SHIFT)** with **(SPACE)** to open the input method's menu, press numeric key to

 
 
choose the input method which you want.

☞ Smart Pinyin

- Press alphabet keys to input the smart pinyin. For example, inputting "WM", you could get "我们、外面、文明..."
- Press **(▶)** or **(◀)** to look up more Chinese phrases.
- Press numeric keys to input the standby Chinese phrase.

☞ Chinese Handwriting Recognition Input

- Write on the handwriting board by stylus.
- Press numeric keys to choose the standby word.

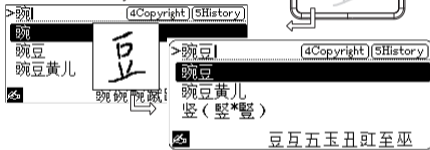

☞ Radical Strokes

- Input the number of strokes, press **(▶)** or **(◀)** to view the standby radical strokes, and press numeric keys to choose.
- Input the remaining number of strokes, press **(▶)** or **(◀)** to view the standby words, and press numeric keys to choose.

☞ Total Strokes

- Input the number of total strokes, press **(▶)** or **(◀)** to view the standby words, and press numeric keys to choose.

English input method

- Press letter key to input English words.

Word Searching

Take The Standard Dictionary of Contemporary Chinese as an example to illustrate the method of searching a word.

- Words in alphabetical order in the index screen.
- If you know clearly the word's spelling, you could input the word and press **[ENTER]** key to search.
- If you are not sure of a word's spelling, you could use Wildcard Search. Input all the letters you know, and then replace the unknown letters with "?" or "*". "?" stands for an unknown letter. "*" stands for a string of unknown letters.
- You can cross search the words in explanation screen: press **[▶]** to mark the word, press **[3Mark]** with **[▲]** / **[▼]** / **[◀]** / **[▶]** to highlight the words from the marked word, press **[1]** key to view the explanation of highlighted words.
- Press **[Q]** to adjust the font size.
- Press **[5History]** to view the history of searching.

Input 『安之若素』 and press **[ENTER]** key to search:

>安之若素 [4Copyright] [5History]
安之若素
安乐
AS
1.质 2.材 3.养 4.来 5.况 →
安之若素
ānzhī-rúosù
(遇到不顺利的或异常的情况)能心情平静,就像平常一样 ④身处逆境,他安之若素,仍潜心于科学
4Stro.

Input 『-? -?』 and press **[ENTER]** key to search:

>-? -? [4Copyright] [5History]
-
一丁点儿 1 一挙一动
2 一五一十
3 唱一和
一下 4 一字一顿
5 一家一户
6 一张一弛
7 一心一德
智 Chinese Pinyin

Highlight 『异常』 and press **[1SDCC]** to view the explanation

安之若素
ānzhī-rúosù
(遇到不顺利的或异常)异常
心情平静,就像平常一样 yícháng
逆境,他安之若素,仍 ① (形)不同平常 ④情况异常|异常的
1SDCC 2C-E 3Relax 表情。
② (副)非常;特别 ④异常沉重|异常
4Stro. Layer number of cross search

- **Pronunciation:** press **[TALK]** key to listen to the pronunciation of highlighted words in index screen, press **[TALK]** key to listen to the full-text pronunciation in explanation screen.
- Highlight the word in explanation screen, and press **[4 Stro.]** to open function of Chinese character stroke learning.

安之若素
ānzhī-rúosù
(遇到不顺利的或异常)心情平静,就像平常
逆境,他安之若素,
1SDCC 2C-E 3Mark 素

Chinese Learning

Provides some functions of Chinese learning, such as: PinYin, strokes, standard radicals, characters structure, punctuation mark, Chinese classifier.

PinYin Learning

- Press **▲/▼/◀/▶** to choose PinYin in the PinYin list, press **ENTER** key to access to the search screen.
- Input PinYin in search screen, and press **ENTER** key to access to the PinYin learning screen.
- Press **1~5** key to listen to the pronunciation of PinYin in the PinYin learning screen, and press **ENTER** key to view the pronunciation rules.

Study PinYin 「cang」

b	p	m	f	d	t	n	l	g
k	h	j	q	x	zh	ch	sh	r
z	c	s	y					
a	o	e	i					
ao	ou	iu	ie					
un	ün	ang	eng					

Navigation: **▶** (to search), **▶** (to search), **▶** (to search), **▶** (to search)

ca
cai
can
ca' >cang
cao

Navigation: **▶** (to search), **▶** (to search), **▶** (to search), **▶** (to search)

1	c	āng	cāng	苍
2	c	áng	cáng	藏
3	c	ǎng	cǎng	
4	c	àng	càng	贖
5	c	ang	cang	

Data of CALC menu

CALC menu includes functions of Di Zi Gui, San Zi Jing,

Hundred Family Surnames.

Di Zi Gui

- Press **▲/▼** key to page up/down to view the content.
- Press **1 Note** to view comment of content, press **2 Tran.** to view the translation of content.
- Press **TALK** to listen to the pronunciation of content.
- Press **4 Chp** to selected chapters.
- You can highlight the vocabulary to search the explanation and view the strokes demo.
- Press **5 Search** to access to search screen, input keyword and press **ENTER** to search.

TIME

Time menu includes functions of World Time, Timer, Stopwatch and Calendar.

- **World Time** View and set time and date.
- **Timer** Timer is a Countdown tool.
Press **▶/◀** to access to the time adjustment of status, press **▲/▼** to adjust hours, minutes, seconds. After adjustment, press **1** to start the countdown.
- **Stopwatch** Press **1** to begin timing.
- **Calendar** Provides comparison of the lunar calendar and the solar calendar from 1901 to 2099. Press **▲/▼** key to set the year, press **▶/◀** to set the month, press **▶/◀** to set the day.

Device Settings

Time & Date	Our device's initialized time is 2088/08/08 8:08am. If you want to change this setting, you can open the [World Time] window, and then choose [Set Time].
Volume	You can press [SHIFT]+[SAVE] to set up the volume, speed.
Contrast	Adjust the contrast in SYS > LCD Setting
Auto Power Off	Our device's initialized auto power off time is "five minutes later power off automatically". If you want to change this setting, please open the [Power Management].
Battery	Check the battery capacity in SYS> Battery Capacity
Handwrite penup time	The initialized handwrite penup time is 1.2 seconds. You can set up in the [Handwriting Setting].

Attention

Touch Panel & Display To protect the screen from being scratched, use only the stylus that comes with this product. When cleaning, rub the screen lightly with dry, clean and soft cloth (do not use volatile liquid). The screen may crack if the product falls on the ground.

Battery Keep the battery far from the fire. Otherwise, there is a risk of explosion. Do not connect the battery's terminals together to avoid short circuit.

Earphone The sound volume of the earphone should be not too high so as not to injure your hearing.

Non Waterproof The device is non waterproof. Please keep it away from any liquid. If it gets wet, please dry the surface and send to our service center for checking.

Magnetism The product is magnetic. Please do not place it with other magnetic products to avoid losing some functions.

Maintenance

- Keep it dry. Precipitation, humidity and liquid that contains minerals will corrode electronic circuits.
- Do not use or store it in dusty, dirty areas as its detachable parts may be damaged.
- Do not store it in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and melt certain plastics.
- Do not store it in cold areas. When the device warms up, moisture can form inside it, which may damage electronic circuit boards.
- Do not attempt to take the device apart. Improper handling may damage the device.
- Do not drop, knock or shake it. Improper handling may

cause damage to the liquid crystal panel.

- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
- Do not paint it. Paint can clog the device's detachable parts and cause it to malfunction.
- Do not operate the device below the temperature 0 or over 40 degrees. Excessive heat or cold will cause malfunction and incur damage to the device. To avoid such from happening, please do not use the device for two hours after it has been exposed to excess heat or cold, because the humidity or moisture formed by the temperature changing will cause damage to the device.



We are obliged to charge user maintenance fee if the product is damaged due to liquid percolation, improper placement of the product (such as eroder by moths), or breakage on the screen (such as screen scratching or breaking) such man-made damages.